

Instructions Manual

Gentle +

4128.2.A26.N

Electric Spa Chair

VERSION 5.26

1.Welcome!

Congratulations on purchasing this new spa chair. This manual is only for reference of using and operating this electric chair. Our company does not assume all the consequences and responsibilities caused by using this manual for other purposes.

All users of this product must read this section of the manual before plugging in and using this chair. Contact your medical practitioner, before using this chair, if you have any special related health or safety concerns.

Plug in the chair to a properly grounded electrical outlet and turn on the master power switch at the control panel of the chair, where the power cord goes into the chair's back section.


This stylish and modern foot massage chair features high-quality white PU upholstery and is equipped with two motors. The integrated control panel on the armrest allows users to adjust the backrest angle and the seat's forward and backward position. The backrest is fitted with a highly elastic, comfortable cushion that can be raised or lowered, while the swiveling armrests facilitate easy seating for customers. The unit comes with a built-in foot bath basin that integrates hydrotherapy massage, spray and LED lighting functions, and the footrest supports manual height adjustment.

The flexible, swiveling armrests maximize ease of access for customers. The one-piece, high-quality fiberglass foot bath basin, combined with hydro-massage functions, further enhances the comfort experience. Once connected to water supply and drainage lines, the unit can utilize hot and cold water taps, and the basin can be drained of accumulated water after each treatment. Adjust the seat position to suit different customer body types and embark on a journey of relaxation!




Imported by
WEELKO BARCELONA SL
Pol. Ind. La Valltan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com

2.Chair parts

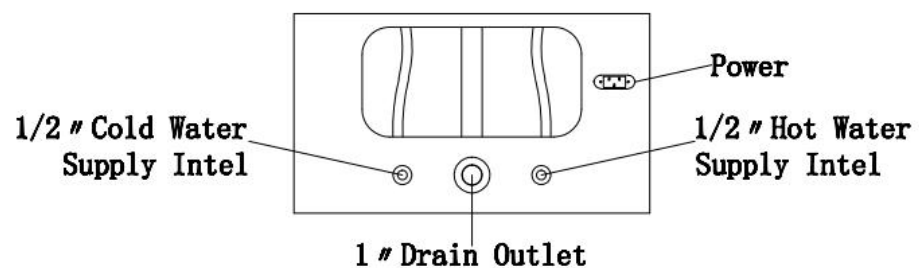

3.Features

REMOTE CONTROLLER

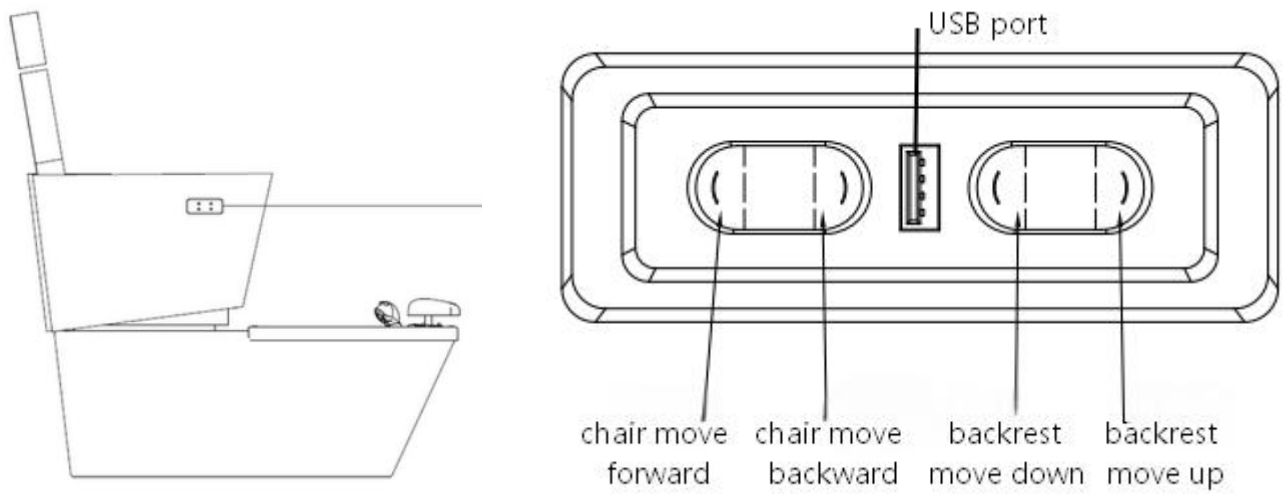

4.Specifications

Descriptions	Features
Models	WKS033. 2. A33. 1/2 & WKS033. 2. A33. 2/2
Related voltage	100~240VAC
Rated frequency	50/60Hz
Rated power	120W
Chair packing dimension	Chair carton: 800*750*530 (mm) Base carton: 1370*740*500 (mm)
Wire length	Power cord 1.6M/ Remote cord 1.8M
Service condition	Temperature: 25 °
	Humidity: 30-85RH
Storage condition	Temperature: : 20 ° ~ 60 °
	Humidity: 30-85RH
Security features	Equipped with overheating, over current safety protection
Using Effect	Increase blood circulation, relieve muscle fatigue



5.Troubleshooting

Situation	Solve
The chair can not work normally even with power	Please check the lights of the electric board on the side of the chair is on or not, otherwise please replace the fuse in the state of the power-off
The screen of the remote controller can not work even the chair can work normally	Please check the remote controller is connected correctly or not, or replace another same kind controller.
The chair can not move forward and backward normally	lease check the red and back part of the linear actuator under the chair base is connected or not

6.Maintenance

Please turn off or unplug the power cord when the chair is maintaining or cleaning.

- 1.For leather cleaning, please use the neutral detergent for dust cleaning.
- 2.For the armrest cleaning, please use the neutral detergent for dust cleaning.
- 3.For the maintenance of the mechanical, can appropriate add the grease quarterly.



Imported by
WEELKO BARCELONA SL

Pol. Ind. La Valldan
Cami de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com